


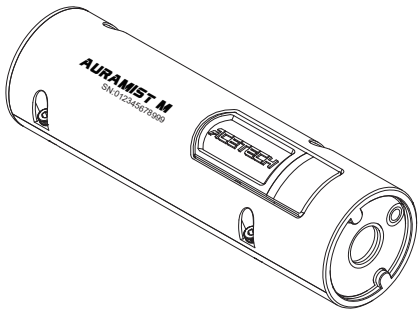

* The manufacturer reserves the right to change all contents and specifications described in this manual without prior notice.
* All specifications and functions described in this manual are subject to the actual product.


Precautions

-  The internal circuit contains high voltage. Do not disassemble the device to avoid the risk of electric shock.
-  When using AuraMist M mounted on an airsoft gun, never look directly into the muzzle. Accidental discharge may cause temporary or permanent eye injury.
-  If the device will not be used for a long period, charge the battery before storage. The device must be recharged at least once every two months. (Failure to recharge for more than two months may cause excessive battery discharge, which can shorten battery life or damage the battery. Such cases are not covered under warranty.)
-  Use purified or distilled water with AuraMist M.
Do not add alcohol, perfume, cleaning solutions, disinfectants, oily liquids, excessive essential oil, or any other liquids, as this may damage the internal mechanism.
The mist is not for direct inhalation. Use in a well-ventilated area.
-  AuraMist M has smoke interference filtering capabilities and requires a 10 m/s BB bullet.triggers the luminescent function.

Contents



Feature Locations

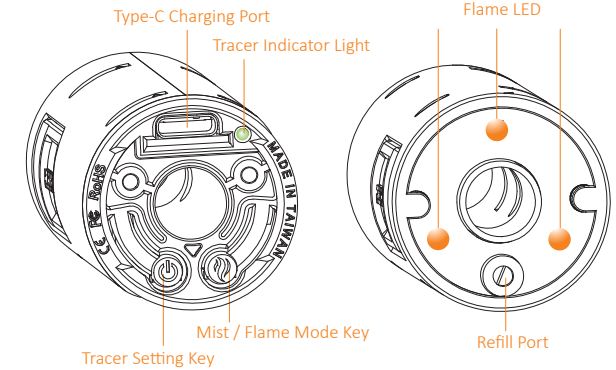


Installation

- When installing AuraMist M, make sure that the gun barrel does not block the internal sensor of AuraMist M.
If the sensor is blocked and the device cannot detect BBs, the Flame LED will flash and the buzzer will beep three times as a warning.
The warning will occur once every 2 seconds, and the device will automatically power off after three warnings.



- The relative positions of the front LED / refill port and the front cap need to be adjusted manually to avoid affecting the muzzle flash effect and the water refilling process.

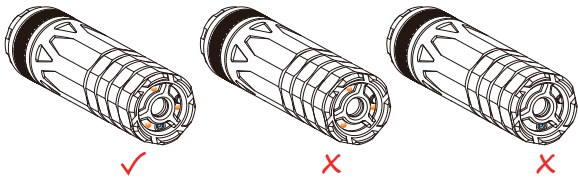

Tracer Operation Instructions

Tracer Setting Key

- Short press: Power ON / OFF  Click
- Press and hold for 3 seconds (while powered on):
Switch tracer mode  3 Sec

Buzzer / Tracer	Icon	Functions (Default settings: Standard Tracer Mode) Automatically recall last settings
Beep once, tracer flashes once	 x1	Tracer lights up with every shot (Default)
Beep three times	   x3	Tracer OFF

Mist / Flame Mode Key

- Short press to switch Flame Mode. 

Buzzer / Flame	Icon	Functions (Default settings: Standard Tracer Mode) Automatically recall last settings
Beep once, flame flashes once	 x1	Flame lights up with every shot (Default)
Beep five times	     x5	Flame OFF

Mist Duration Setting

- While the device is powered on, press and hold the Mist / Flame Mode button for 3 seconds to switch mist duration.

Buzzer	Icon	Functions (Default settings: Standard Tracer Mode) Automatically recall last settings
Beep once	 x1 	Short mist duration – Default
Beep twice	  x2 	Medium mist duration
Beep three times	   x3 	Long mist duration
Beep four times	    x4	Mist OFF ✕


✕ For first-time use, the cotton wick is new and the mist function will activate immediately.
If the wick has dried out, after refilling, wait until the wick is fully saturated with water before mist is produced.

Automatic Drying Function:

When AuraMist is powered off after the mist function has been used, the device will automatically activate the internal tube drying mode.
The fan will run for approximately 30 seconds to remove residual moisture inside the tube, keeping the device dry and helping extend its service life.


Charging

- Before first use, connect the Type-C charging cable to charge the device.
Remove the charging cable after charging is completed.

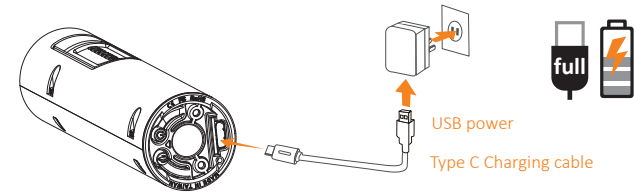

Note : It is recommended to use a USB power source of 2A or above.

- During charging, the tracer indicator light will gradually brighten and dim, indicating that charging is in progress. When charging is complete, the indicator light will turn off.

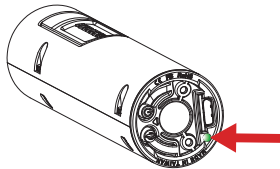

- Red: 0% ~ 30%
- Orange: 30% ~ 60%
- Green: 80% ~ 99%


Refilling Water

Before use, insert the refill needle bottle into the refill port and squeeze to fill the water tank with clean water.
The water level must be above the red line mark.
If water spills out, simply shake off the excess water.



Intelligent Power Control

- Auto Sleep:** If the device remains idle for more than 5 minutes, AuraMist will enter power-saving sleep mode.
A slight vibration will wake up the tracer function.

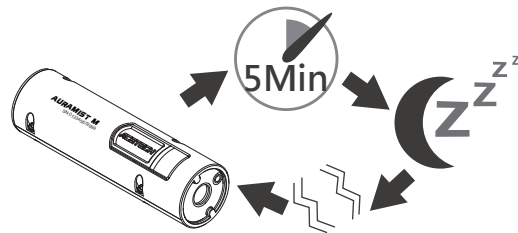


2. Low Battery Auto Shutdown:

- When the battery reaches a low level:
- The tracer indicator and power indicator will flash red several times
 - The device will automatically power off
 - The Flame LED will flash 3 times before shutdown

Self-Test

- Step 1:** While the device is powered off, press and hold the Tracer Setting Button for 6 seconds, then release
- Step 2:** The tracer will enter self-test mode. During testing, the blue LED and flame LED will flash.
- Step 3:** After the test is completed:

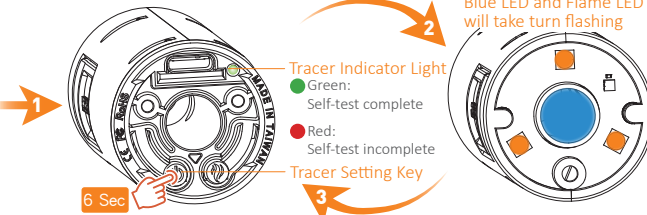

Note 1: Self-testing can only be performed when the tracer indicator light shows green.

Note 2: If the tracer does not light up or detection is abnormal, check whether the inner tube is dirty.
If contamination is found, clean the tube and perform the self-test again.

Specifications

- ✕ Supports standard BBs, water BBs and green/red tracer BBs
- ✕ Built-in lithium battery Charging time: 2.5 hours
- ✕ LED power and battery level indicator
- ✕ Safety certifications: FCC / CE / RoHS
- ✕ Dimensions: Diameter 32.2 mm / Length 110 mm
- ✕ Weight: 65 g
- ✕ Water tank: 4.2ml

Warranty

- Warranty period: 12 months from purchase date or 15 months from manufacturing date, whichever occurs first.
- Any damage caused by external force is not covered under warranty.
- Damage caused by incorrect use resulting in water ingress is not covered under warranty.
- Battery damage caused by over-discharge is not covered under warranty.

