4 Firing Safely 射击

1. When you are sure of your target and backstop, and the area around the target is clear, take "FIRE" (See Step 2.2)

把保险选择杆拔至"下"档位.(见2.2)

2. While holding the air pistol in a horizontal position, cock the soft air pistol by firmly holding the slide with your entire hand, pulling the slide rearward and releasing it in a smooth motion (Fig.4B)

向后拉滑块上膛,直至听到"咔嚓"一声,再释放滑块(图4B)

3. Hold the gun firmly and aim the gun and pull the trigger to fire.(Fig.4C)

对准目标, 手掌紧握握把, 扣动扳机发射(图4C)







Maintenance 维护说明


射出子弹速度变慢时的维护 1. Maintenance when bullet speed becomes low

① Apply Oil as shown below, using the cleaning rod and oiled cotton cloth. Insert cleaning rod into the barrel.

如下图所示。把棉布包扎在清洁棍上并喷上清洁剂。把清洁棍插入枪管中。


② To complete the cleaning, use the cleaning rod (with cotton) as shown below. To remove excess oil.

 清洁完枪管后, 换上干净布条, 清除枪管中多余油渍,



Cut the cotton to the size shown.

 
切一小块棉布、大小如图所示



the rod into the barrel while turning the rod. 握住清洁棍适当位置慢慢旋转同时逐渐插入到枪管中

- Hold at the leading end of the rod and insert
- 2. Normal Maintenance
- Keep the rifle in clean condition.
- Regularly clean the barrel with soft cleaning rod.

 定期用洁净导根清洁枪管



- Always carry out maintenance AFTER returning the hop up lever to the Normal position. (Hop-OFF) 做此维护前请务必把HOP Up调至正常位置.
- Inserting the rod will be difficult if you hold rod at the

手握在未端将难于插进清洁棍

把本产品放置在清洁地方

Never used dirty, damaged or distorted

禁止用脏污的。受损的或劣质子弹

AIR SOFT GUN



OWNER'S MANUAL



WARNING:

WEIGHT: 0.29 KG

MAGAZINE CAPACITY:12 BBS



DANGEROUS: NOT A TOY. Adult supervision required. Misuse or careless use may cause serious injury.



FOR AGES 18 YEARS AND UP - Must be 18 years of age to purchase; minors require parent or legal guardian supervision to operate.



EYE PROTECTION REQUIRED - Always wear eye and body protection to prevent injury. Do not fire at hard surface to prevent ricochet.



READ INSTRUCTION BEFORE OPERATING - Follow safe handling procedures at all times. The purchaser and user should conform to all laws governing the use and ownership of




DO NOT BRANDISH OR DISPLAY THIS PRODUCT IN PUBLIC - It may confuse people and may be a crime. Police and others may think it is a firearm, Do not change the coloration and markings to make it look more like a firearm. That is dangerous and may be a crime.

Age: above 18

WARNING 注 意


Always read through this manual before operation 使用前请阅读此说明书

- Read through this manual before shooting, paying special attention for safe operation 使用前请通读此说明书,特别注意关于安全方面的操作。
- Failing to do so may cause injury, accidents, or damage to the gun.
 不当操作可能会引起伤害事故,或损坏枪支性能.

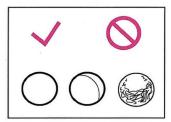

Always use precision BB Bullets for this air gun. Never use any used BB bullets.

请使用精密BB子弹。不要使用任何使用 过的BB子弹。

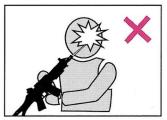


Do not look directly into the gun barrel to avoid accidental discharge of BB.

不要直接地看枪管,避免BB弹意外发射



Do not brandish in public, do not alter the coloration and warningssuch an action is dangerous and may be a crime.

切勿在公众场合展示本汽枪, 它会引起 公众的不安.

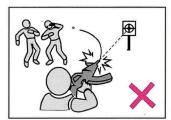

Never hold the gun sideways as the BB bullets will curve right or left. This is due to the HOP-UP system.

切勿把枪支侧置射击, 因为上翻弹 (HOP UP) 功能会导致弹道偏向左侧或右侧



Never aim or shoot a person or animal as the target. Always set the selector on safety position except when you are ready to shoot a target.

不可把人或动物当作目标瞄准或射击。请把 选择杆拔在安全档,除非准备射击安全目标。



Select a safe place for operating the air gun, avoiding places where people and cars pass cross or third persons are around.

选择一个安全的地方操作气枪,避免在有人和汽车的路上操作气枪。

Component Chart 部件名称 1. Learning the Parts of Your New Soft Air Gun. Learning the names of the parts of your new soft air gun will help you to understand your owner's manual. Use this manual to increase your enjoyment of this soft air gun. Front Sight Slide Rear Sight Hammer 前准星 后准星 击锤 Muzzle Safety/Fire Selector 保险/发射选择键 Trigger **Grip Safety** Magazine 握把保险 Magazine Release Botton Grip 弹盒卸钮 握把 Cleaning Rod 清洁棍 Fig.1

Operating the Safety 安全设置



Keep the soft air gun in the "SAFE" position until you are actually ready to shoot. Then push the safety to the "FIRE" position.

请把保险选择杆保持在"S"档位,除非已准备射击时才把其拔到"F"档位.

1. To Put the Soft Air Gun "SAFE":

把保险选择杆设在"安全"档位

- Locate the safety on the Left hand side of the receiver, above the trigger.(Fig.2) 保险选择杆位于枪体左侧.(图2)
- Push up on the safety, toward the "S" on the receiver, until it stops. 把选择杆技"s"位置

WARNING Like all mechanical devices, a soft air pistol safety can fail, Even when the safety is "ON SAFE", you should continue to handle the soft air pistol safety. NEVER point the soft air pistol at any person, NEVER point the soft air pistol at anything you do not intend to shoot.

警告 跟所有机械装置相同,本产品的安全拨钮也可能失效,即使已把它设在保险档位,您仍需安全操

作本软弹枪. 切勿随意瞄准任何人.

2. To take the Soft Air Gun "FIRE":

把汽弹枪设在"发射"档位

 Locate the safety on the left side and push down towards the "F" on the receiver,until it stops. The soft air gun is ready to fire when "FIRE" (Fig.2)

把保险选择杆拔至"F"位置,即可准备射击(图2)



3 Loading Plastic BBs 装入塑料BB弹




Use . 24 caliber (6mm) plastic BBs only this soft air gun. Use of any other ammunition can cause injury to you or damage to soft air gun. 使用6mm塑料BB弹. 使用其它子弹者可能引起人身伤害或损坏本产品

1. Loading Plastic BBs 装入塑料BB弹

- While supporting the bottom of the grip with your hand to catch the magazine, press the magazine release button and remove the magazine from the bottom of the grip frame. 按下弹盒卸钮,卸下弹盒,注意避免弹盒跌落摔坏或伤及人身.
- Load no more than 21 plastic BBs into the magazine loading port (Fig.3)
 券入约21約BB
- Insert the loaded magazine back into the bottom of the grip frame until you hear a click, indicating the magazine is securely locked into place.

把弹盒从握把底部插入,直至听到"咔嚓"一声,



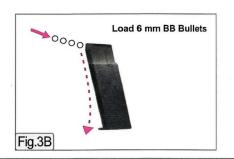

1 —