

Mas

Tracer Unit User Manual V1.0

V600


Product Overview


Dear customers,

Thanks for purchasing our FLARE M. In order to help you know how to use it better, please kindly ready this manual before using and remember to keep it well.

Package inlcude: 1 x Flare M Tracer Unit, 1 x Adaptor(M14-CCW to M11+CW), 1 x Type C Charging Cable, 1 x Allen Wrench (Support white BBs/Green tracer BBs/Gel BBs) White BBs have better showing in Rainbow mode.

Tracer Introduction:

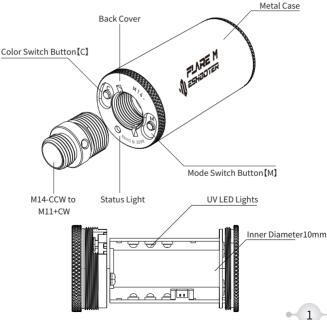

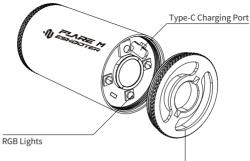

Front Cover

Product Specification

Product Model	V600
Size	54 x 28 mm (LxD)
Weight	40 g
Case Material	Metal
Temperature Rage	-20°C ~ 60°C
Battery Capacity	320mA

Rated Input	5V 0.5A
Standby Current	<6 µA
Working Current	<800mA
Usage time	\leq 6h
Standby time	\geq 3Months
User Age	14 +

Instructions

	Each time the mode switching button [M] is pressed, a function is switched, and the 4 modes are cycled in turn.			
M14-	Status light	Mode	Status	
	•	Flame	NEWARTER E	
ANIHO MI JOH	•	Tracer with flame	A REMOVIEM	
	•	Tracer		
Status light	Twinkle twice	Turn OFF		

Note: Do n	you press the color switching button [C] to switc 10 colors cycle through ot look directly at the RGB lamp beads when sw	itching colors		
RGB Lights	Function Description	on Display State		
•		4 PLANE M		
•	Displays current color when mode is switched to FLAME or TRACER with FLAME	4 FLARE A		
•		4 PLANE H		
•		4 PLANE N		
٠		4 PLANE M		
٠		4 PLANE H		
٠		Quantum N		
0		4 PLANE M		
	Displays rainbow when mode is switched to FLAME or TRACER with FLAME	A FLARE H		
	Displays 8 colors cycle when mode is switched to FLAME or TRACER with FLAME	di managana		

Product Notice

Sleep&Active

If the FLARE M is not work for 5 minutes, it will automatically go to sleep, and shake the product to activate the device again. (Active shutdown cannot be activated by shaking)

Charge


The Type-C charging port only supports DC 5V power supply ,Please use a regular mobile phone charger or power bank to charge ; When charging, the red light is always on. When fully charged, the green light is always on. It takes about 2 hours to fully charge.

Low battery warring


When the battery voltage is too low, the working indicator light will flicker red, which is a low battery alarm reminder, please charge it in time!

Installation notes

Please make sure that the inner barrel of the gun does not exceed the barrel thread by 10mm, otherwise it will not work properly.

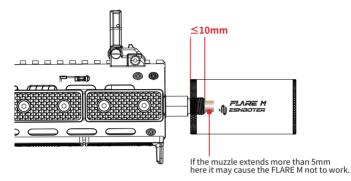

When installing the M11+ internal barrel pistol, you must use the M14- to M11+ adapter, and use the Allen wrench to tighten the adapter.

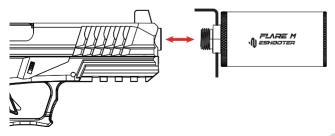

Warning

- The interior is a delicate part, please do not disassemble it by yourself
- Unable to use while charging, please unplug the power and restart
- Do not look directly at the RGB lights after powering on to avoid eyes damage!
- It is forbidden to maliciously use the transmitter to directly irradiate human eyes, and ESHOOTER will not be responsible for the damage caused by this!
- Please turn off in time when not in use. If the battery is not charged for more than 3 months, the battery may be over-discharged and its lifespan will be reduced or even damaged.
- It is forbidden to throw it into the fire, because the battery in the light emitter may explode and pollute the environment.

Declaration of Toxic and Hazardous Substances

	Toxic and Hazardous Substances or Elements					
Parts	Plumbum (Pb)	Mercury (Hg)	Cadmium (Cd)	Chromium VI (Cr6+)	Poly- brominated biphenyls (PBB)	Poly- brominated diphenyl ethers (PBDE)
Plastic	\bigcirc	\bigcirc	0	\circ	0	\bigcirc
Metal	×	0	0	0	0	0
РСВ	×	0	0	0	0	0
Other	×	0	0	0	0	0

Indicates that the content of the toxic and harmful substances in all homogeneous materials of the part is less than the requirement in SJ/T-11363-2006 《Limit requirements for toxic and harmful substances in electronic products》.

 λ Indicates that the content of the toxic or hazardous substance is at least in one homogeneous material of the part exceeds the limit requirement by SJ/T11363-2006.

This product complies with RoHS environmental protection requirements: At present, there is no mature technology in the world that can replace or reduce the lead content in electronic ceramics and copper alloys.

Warranty Card

ame:
none Number :
nail :
ldress :
em Model: FLARE M
spector :
ate of Production :

After Sale Policy

Please keep this warranty card, purchase receipt and product packaging properly. Please present them when after sales service is requested.

1. FLARE M has 6 months warranty service since the date of purchase.

If there is any quality issued found under the normal operation (not man-made damaged) while the product has not been disassembled by unauthorised technicians, the product is free for replacement in the first 30 days from the date of purchase.

3. During the warranty period, if there is a quality defected be found in the normal operation, free repair service is provided after the production is inspected and verified by the authorised technicians. Warranty service does not include the transportation cost and door to door service.

4. Warranty is void under the below circumstances, free repair service is no longer provided if, 4.1 User does not follow the instruction menu, mis-installation, storage and use which lead to the product failure or damage.

4.2 Any damage caused by force majeure reasons.

4.3 Product failure or damage caused by the disassemble or modification by the unauthorised technicians.

4.4 Warranty card or purchase receipt is not provided.

4.5 Warranty period is expired.

5. Warranty service would be refused to provide if there original warranty card is not presented, the repair record is not consistent with the fact, any alteration or unrecognised description on the warranty card.







www.eshooter-world.com



Watch the Video

E-SHOOTER TECHNOLOGY (SHENZHEN) CO.,LTD.

🕺 Galaxy World Phase I Tower A,No.1 Yabao Road, Longgang District, Shenzhen, China

2 0086 0755 84503091

Support@eshooter-world.com

