

ACTIVATE PROGRAMMING MODE



2. SET TO SEMI TO TOGGLE FUNCTIONS:



3. SET TO AUTO TO TOGGLE OPTIONS:



4. SAVE SELECTED OPTION:



5. EXIT PROGRAMMING MODE:



LANCER TACTICAL, INC.
12140 ALTAMAR PL
SANTA FE SPRINGS, CA 90670, USA



SCAN QR CODE FOR FULL MANUAL

PROGRAM CONFIGURATION

SEMI POSITION		AUTO POSITION	
FUNCTION WITH CORRESPONDING NUMBER OF VIBRATIONS AND LED COLOR	FIRE MODE	1	SAFE-SEMI- AUTO
		2	SAFE-SEMI-BINARY
		3	SAFE-SEMI-SEMI
		4	SAFE-SEMI-BURST
		5	GCS Setting**
	Pre-cocking	1	OFF
		2	LOW
		3	MID
		4	HIGH
		5	GCS Setting**
	Battery Protection	1	OFF
		2	LiPo
		3	LiPo 3.2V Warning
		4	GCS Setting**
		5	Adaptive
Active Brake	2	100%	
	3	60%	
	4	OFF	
	5	GCS Setting**	
	1	DTC	
Advanced	2	Clear DTC	
	3	Restore Default Settings	
	4	Restore Factory Settings	
	5	Set Trigger Sensitivity	

- To evoke options of Advanced function, hold the trigger down for more than 3 seconds.
- GCS setting is a setting previously defined in GCS app, which value is not available for selection in this programming mode. Once you change such setting to a different option during programming via trigger and then exit this programming mode, it is no longer possible to set that setting from this level (it can be still specified via GCS)