


AEP MOSFET

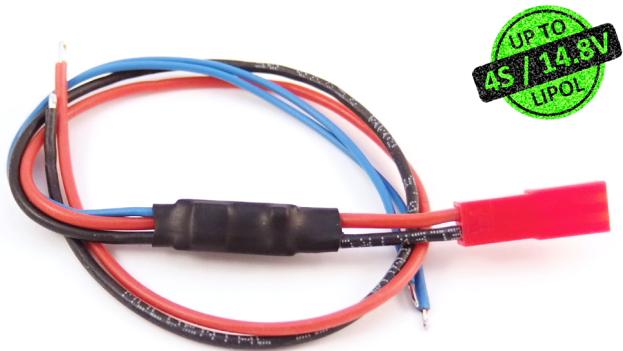

Limitation: spring M160 (current 25A)

This device has to install expert.
He must know how to disassemble airsoft gun and solder.
Never use soldering gun!

www.jefftron.net



How connect device into the AEP pistol

- 1) Black wire solder to the motor negative - located on the left side.
- 2) Red wire solder to the motor positive - located on the right side.
- 3) Blue wires solder separately to both trigger contacts.
- 4) Place mosfet with JST connector to the old battery space.

Be extra sure to connect the red and black wires appropriately, otherwise you should destroy the device, weapon or battery.

Recommended lipo battery: Turnigy Nano-Tech Plus 300mAh 2S 70C

