

MICRO MOSFET II

WITH WIRING



Limitation: spring M160 (current 25A)

This device has to install expert.

He must know how to disassemble airsoft gun and solder.

Never use soldering gun!

www.jefftron.net



How connect device into the gun

- 1) Black wire lead to the battery negative (leads alone from device)
- 2) Black wire lead to the motor negative (comes with the blue wire)
- 3) Blue wire lead to the one trigger contact (no matter which one)
- 4) Red wire lead to the battery and motor positive. Add fuse on this wire close to the battery (included in package).
- 5) Rest of blue wire cut and lead between another trigger contact in the gearbox and anywhere on the red wire.

Be extra sure to connect wires appropriately, otherwise you could destroy the device, weapon or battery.

