

# WARNING: BEFORE USAGE, THE INSTRUCTION MUSE BE READ.

THANK YOU FOR PURCHASING. THE FOLLOWING ATTENTION POINTS AND INSTRUCTIONS MUST BE READ. SHOOTING WITHOUT CAUTION OR USED IMPROPERLY, BLINDNESS OR INJURIES COULD BE LEAD.



DO NOT POINT AT PEOPLE OR ANIMAL.




GUN AND GAS MUST NOT BE PLACED IN AREA WHERE TEMPERATURE IS OVER 40 °C



PLACE IN GUN CASE WHEN NOT IN USING OR TRANSPORTING



DO NOT USE GAS WHICH PRESSURE IS OVER 12 Kgs/cm<sup>2</sup>

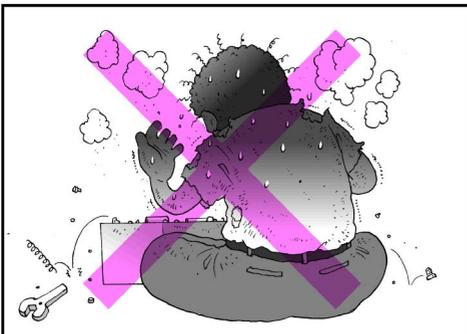

UNAUTHORIZED RECONSTRUCTION OF AIR SOFT GUN TO STRENGTHEN FIRING FUNCTION IS STRICTLY PROHIBITED.




BE CAREFULL WHAT TARGET YOU SHOOT



EYE PROTECTION DEVICE MUST BE EQUIPPED



DO NOT LOAD ANYTHING BUT BB BULLETS.

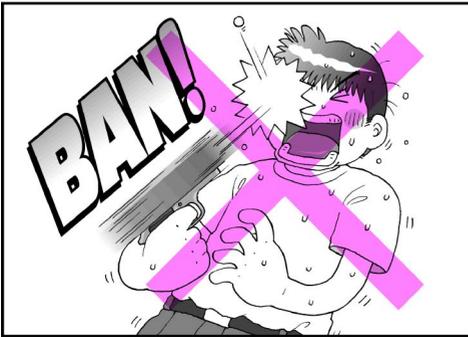

DO NOT LOOK THROUGH THE BARREL



PLEASE SHOOT IN SAFE PLACE


## OPERATION

### 1. REMOVE THE MAGAZINE



PRESS MAGAZINE CATCH AND REMOVE MAGAZINE

### 2. FILLING GAS

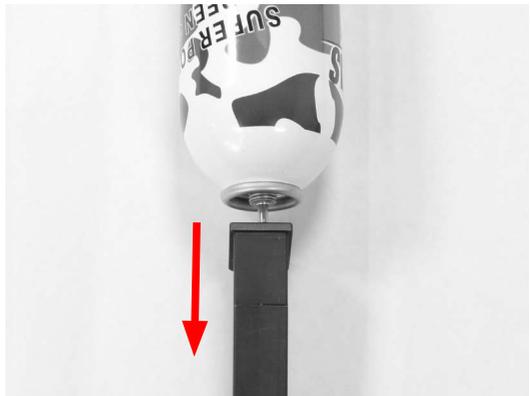

FILL THE GAS BOTTLE TO THE MAGAZINE IN VERTICAL DIRECTION.

### 3.LOAD BB BULLETS



### 4.INSERT MAGAZINE



### 5.LOAD



PULL THE SLIDE COMPLETELY TO THE REAR.

### 6.FIRE



PULL THE TRIGGER.

## 8. DECOCKING HAMMER



PRESS THE DECOCKING LEVER TO DECOCK HAMMER WHEN YOU ARE NOT SHOOTING.


## DISASSEMBLY

### 1. REMOVE MAGAZINE AND SLIDE




REMOVE MAGAZINE AND ROTATE THE TAKEDOWN LEVER CLOCKWISE UNTIL IT STOPS AND REMOVE THE SLIDE.

### 2. REMOVE THE RECOIL GUIDE

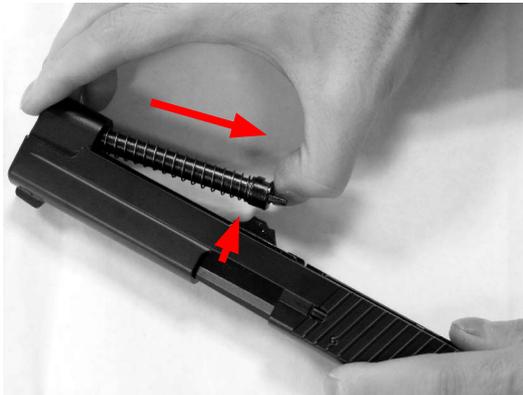

REMOVE THE RECOIL SPRING GUIDE AND SPRING.

## 3. REMOVE THE BARREL

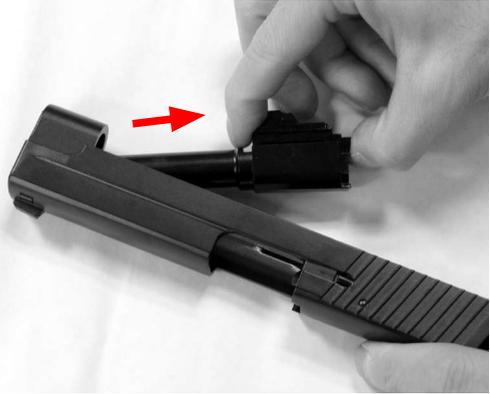


## ASSEMBLY

REVERSE THE DISASSEMBLY ORDER


## ADJUST TREJECTORY

TWIST THE ADJUST DIAL TO ADJUST TEAJECTORY.

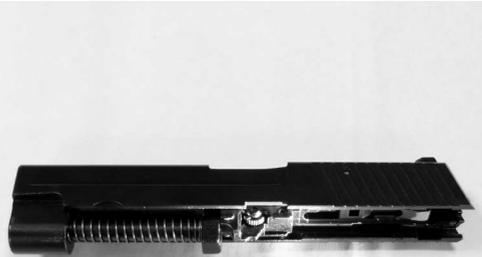


ADJUST DIAL


PLEASE ADJUST ACCORDING TO TREJECTORT

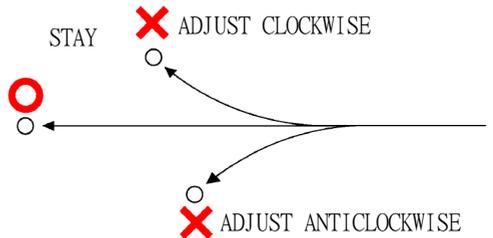

# KP-01-E2

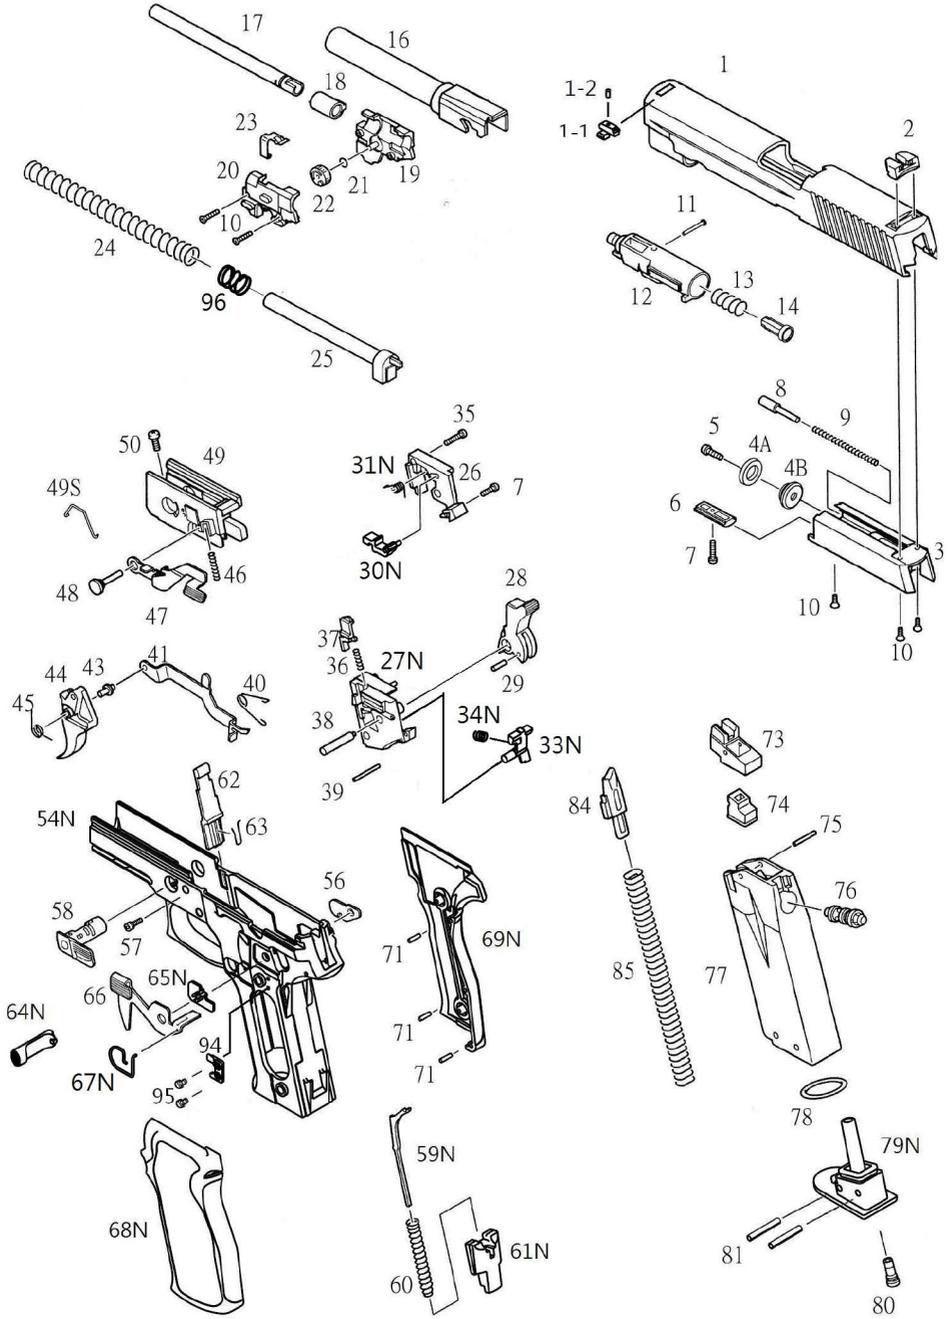

NO.	NAME	PRICE	NO.	NAME	PRICE
1	SLIDE	1600	42	SAFETY BAR	50
1-1	FRONT SIGHT	150	43	TRIGGER BAR SHAFT	30
1-2	FRONT SIGHT SCREW	10	44	TRIGGER	120
2	REAR SIGHT	100	45	TRIGGER SPRING	30
3	PISTON	400	46	SLIDE STOP SPRING	20
4A	PISTON CAP	20	47	SLIDE STOP	100
4B	PISTON CAP BASE	40	48	TRIGGER SHAFT	50
5	PISTON SCREW	10	49	FRONT CHASIS	250
6	PISTON PARTS	30	49S	TAKE DOWN SPRING	20
7	PISTON PARTS SCREW	10	50	SCREW	10
8	RETURN PLUNGER	30	54N	FRAME	2000
9	CYLINDER RETURN SPRING	20	55	SCREW	10
10	SCREW	10	56	MAGAZINE OBTAINING COVER	30
11	CYLINDER PIN	10	57	SCREW	10
12	CYLINDER	150	58	TAKEDOWN LEVER	100
13	CYLINDER VALVE SPRING	20	59N	HAMMER STRAT	50
14	CYLINDER VALVE	20	60	HAMMER SPRING	50
16	OUTTER BARREL	600	61N	HAMMER SPRING HOUSE	60
17	INNER BARREL	150	62	MAGAZINE OBTAINING STOPPER	50
18	RUBBER CHAMBER	80	63	MAGAZINE OBTAINING SPRING	10
19	CHAMBER COVER(RIGHT)	120	64N	MAGAZINE OBTAINING	100
20	CHAMBER COVER(LEFT)	120	65N	DECOCKING LEVER BEARING	40
21	O RING	10	66	DECOCKING LEVER	120
22	ADJUST DIAL	20	67	DECOCKING SPRING	20
23	ADJUST LEVER	50	68N	GRIP (LEFT)	100
24	RECOIL SPRING	60	69N	GRIP (RIGHT)	100
25	RECOIL SPRING GUIDE	120	71	SPRING PIN	10
26	REAR CHASSIS (RIGHT)	120	73	BB LIP	60
27N	REAR CHASSIS (LEFT)	140	74	MAGAZINE GASKET	60
28	HAMMER	150	75	BB LIP PIN	10
29	HAMMER PIN	10	76	VALVE	120
30N	KNOCKER	40	77	MAGAZINE CASE	400
31N	KNOCKER SPRING	30	78	O RING	20
32	KNOCKER RETURN SPRING	30	79N	MAGAZINE BASE	180
33N	SEAR	60	80	FILLING VALVE	50
34N	SEAR SPRING	30	81	MAGAZINE BASE PIN	10
35	SCREW	10	84	FOLLOWER	30
36	KNOCKER LOCK SPRING	20	85	FOLLOWER SPRING	50
37	KNOCKER LOCK	50	94	DECOCKING LEVER FIXER	100
38	HAMMER PIN	30	95	DECOCKING LEVER FIXER SCREW	10
39	REAR CHASSIS	20	96	RECOIL SP(SMALL)	30
40	TRIGGER BAR SPRING	20			
41	TRIGGER BAR	120			

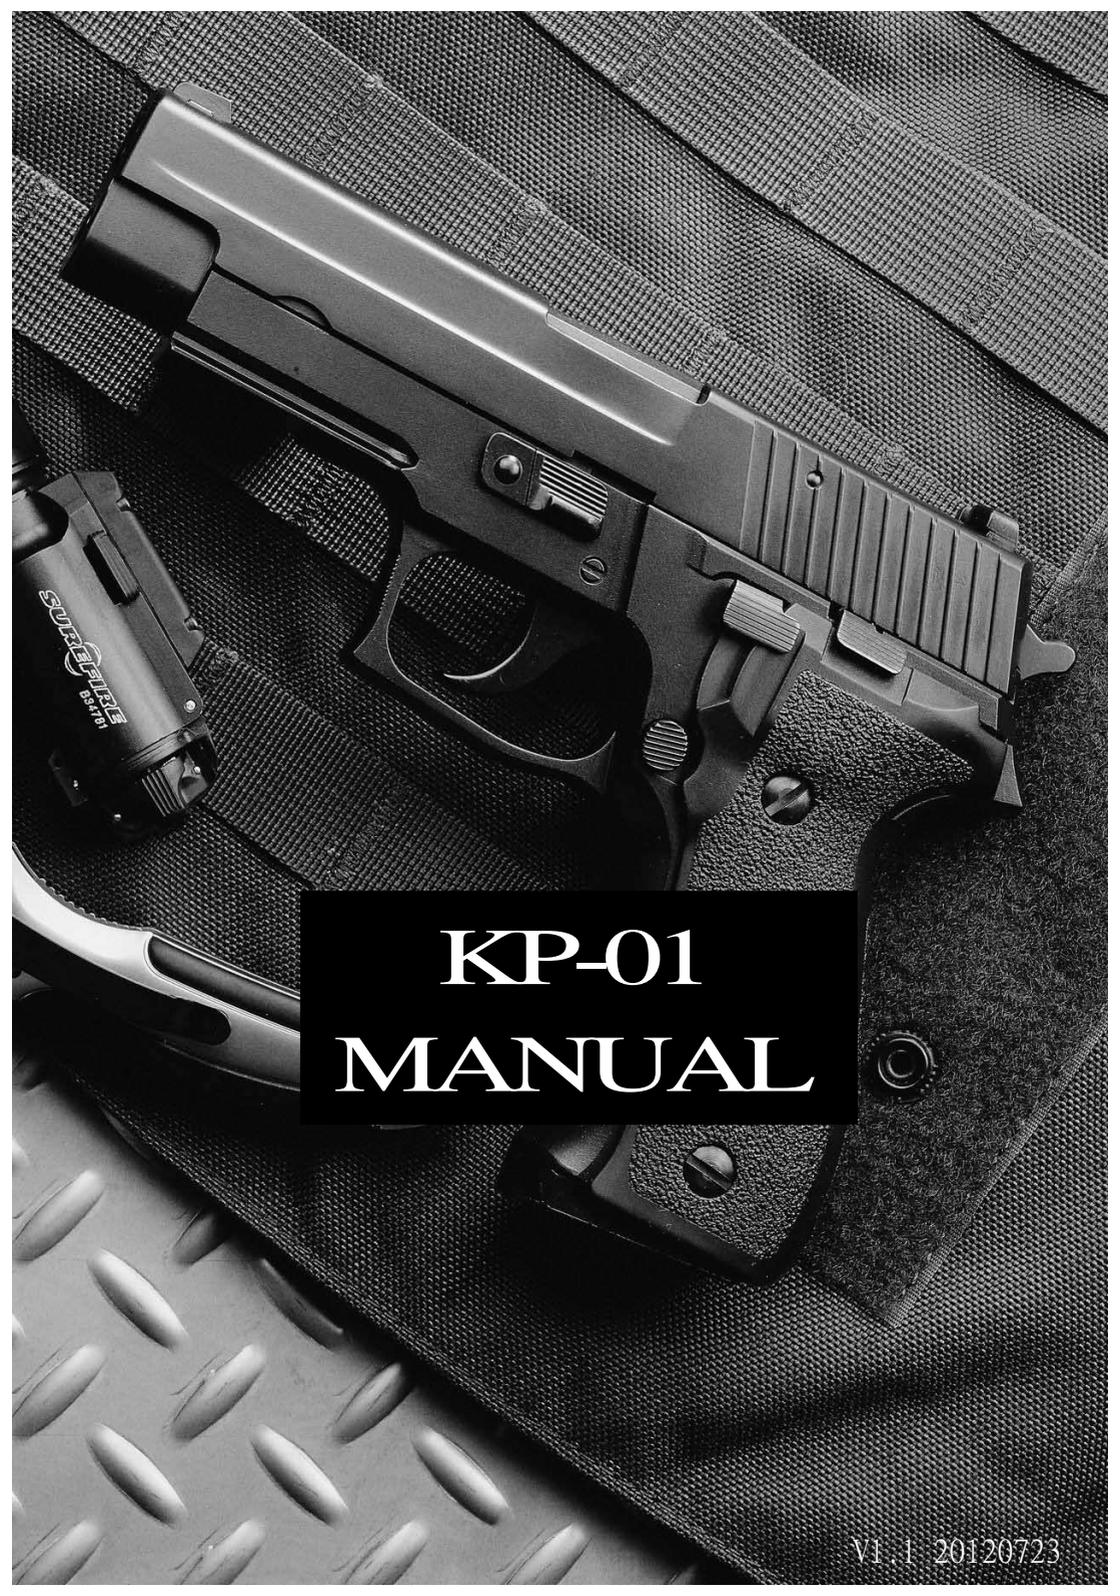A black and white photograph of a handgun and a flashlight resting on a tactical bag. The handgun is a semi-automatic pistol with a textured grip and a slide. The flashlight is a compact, cylindrical model with a lens at the front. The background is a dark, textured fabric with a grid pattern. The overall tone is professional and technical.

# KP-01 MANUAL

V1.1 20120723

KJWORKS