



AGE: ABOVE 18
USE 6mm BB BULLET
INSTRUCTION MANUAL



UTR

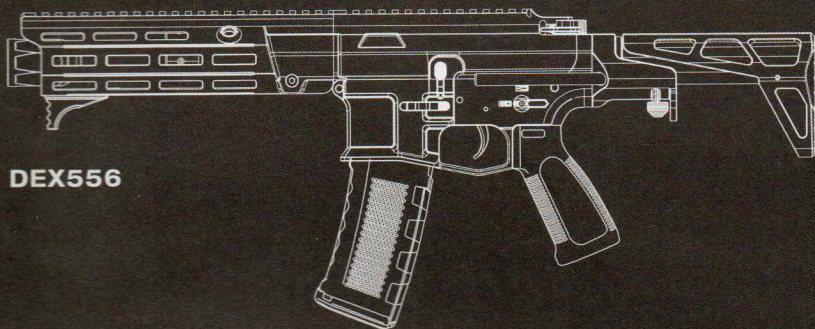

DEX556

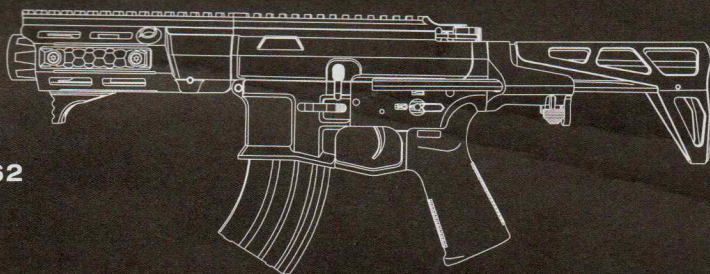

DEK762

WARNING:


	DANGEROUS: NOT A TOY. Adult supervision required. Misuse or careless use may cause serious injury.
	FOR AGES 18 YEARS AND UP - Must be 18 years of age to purchase; minors require parent or legal guardian supervision to operate.
	EYE PROTECTION REQUIRED - Always wear eye and body protection to prevent injury. Do not fire at hard surface to prevent ricochet.
	READ INSTRUCTION BEFORE OPERATING - Follow safe handling procedures at all times. The purchaser and user should conform to all laws governing the use and ownership of airguns.
	DO NOT BRANDISH OR DISPLAY THIS PRODUCT IN PUBLIC - It may confuse people and may be a crime. Police and others may think it is a firearm, Do not change the coloration and markings to make it look more like a firearm. That is dangerous and may be a crime.



WARNING

Always read this manual before use

1. Read through manual before shooting, pay special attention to safe operation.
2. Thoroughly understand the warnings and cautions for safe operation.
3. Always follow warnings and cautions strictly, failing to do so may cause injury, accidents or damage to the airsoft gun.
4. Treat every airsoft gun as if it were loaded.
5. Never point a airsoft gun at anything you do not intend to shoot.
6. Keep your finger straight and off the trigger until you intend to fire.
7. Keep the safety on until you are ready to fire.

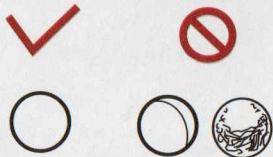

Always use precision BB Bullets for this air gun. Never use any used BBs



Do not look directly into the gun barrel to avoid accidental discharge of BB.



Never aim or shoot a person or animal as the target. Always set the selector on safety position except when you are ready to shoot a target.




Never hold the gun sideways as the BB bullets will curve right or left. This is due to the HOP-UP system.




Do not brandish in public, do not alter the coloration and markings, such an action is dangerous and may be a crime.



Select a safe place for operating the air gun, avoiding places where people and cars pass cross or third persons are around.

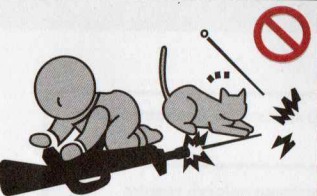

Always remove the battery and store the air gun in a case or bag and at a place out of reach by children so that they will not be injured during mischevous play.

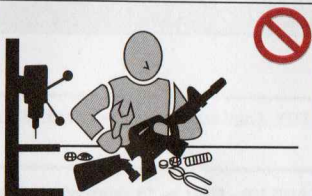


Disassembling or modifying the gun may generate danger or adversely affect the performance, so avoid disassembling or modifying the air gun.




There are cases that bullets remain in the gun after the magazine is disconnected, pulling the trigger carelessly is extremely dangerous. After towards a safe direction and fire to confirm that no bullets remain in the gun.

1 COMPONENTS

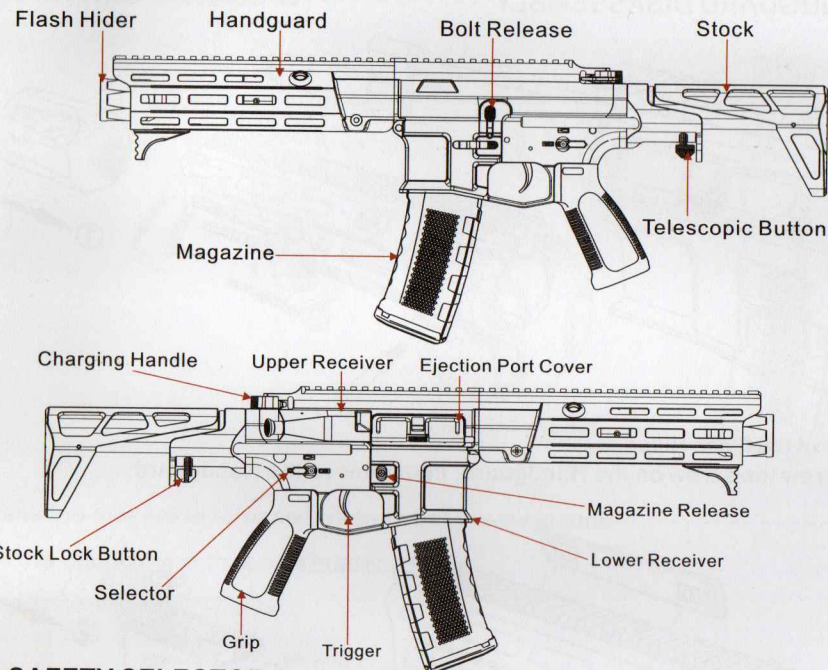


2 SAFETY SELECTOR

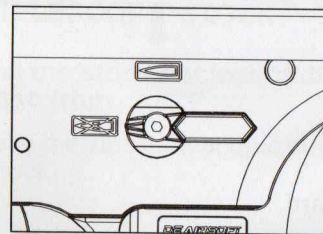


Warning


Do not switch the selector lever when the trigger is pulled. Do not pull the trigger when switching the selector. Damage and malfunction will occur if you attempt to do so.

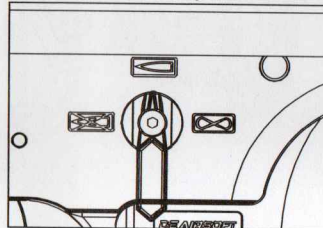

2. Semi-Auto
Airsoft gun fires a single BB with each pull of the trigger.

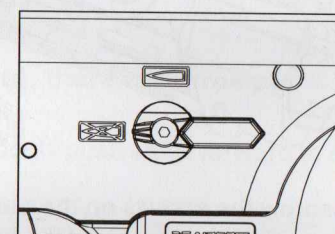


1. Safety Setting
Please set the selector lever to safe when not using the gun.

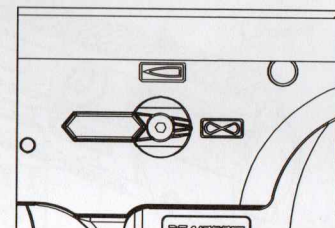

3. Full-Auto
The airsoft gun will fire continuously while the trigger remains pulled.


3 HANDGUARD DISASSEMBLY

3-1

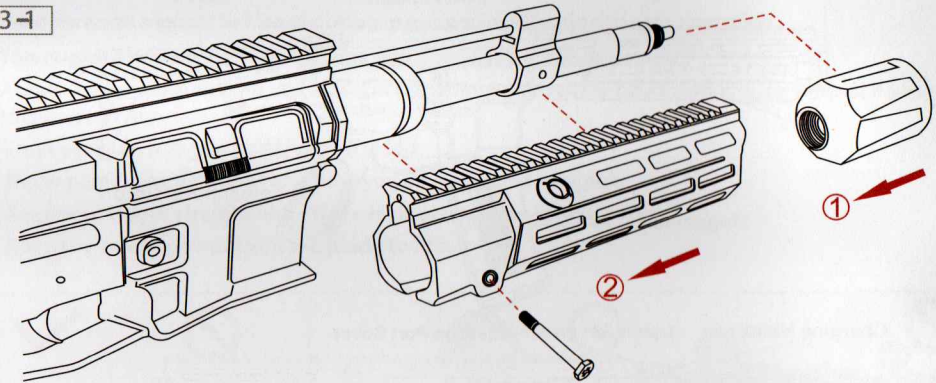


- 1.Remove the Flash Hider.
- 2.Unscrew the screw on the Handguard, then remove the Handguard.

3-2

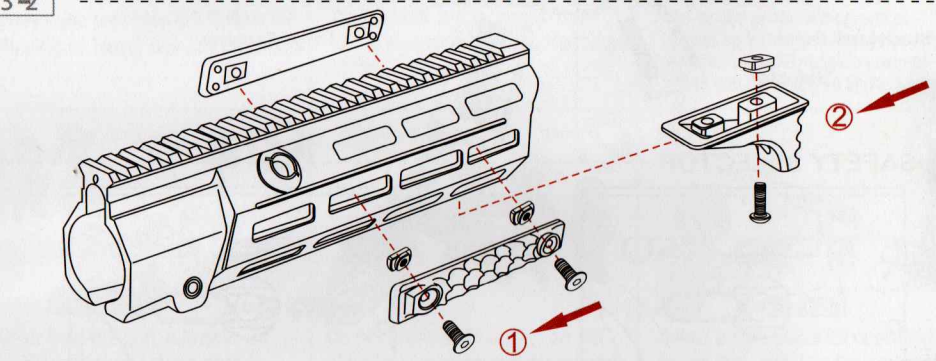


- 1.Unscrew the screws on the panels of handguard.
- 2.Unscrew the screw under the handstop.

3-3

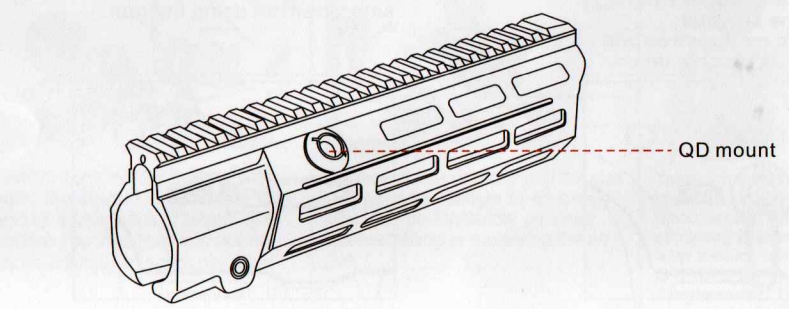

QD mount for sling or other accessories with QD mount.


4 LOADING MAGAZINE

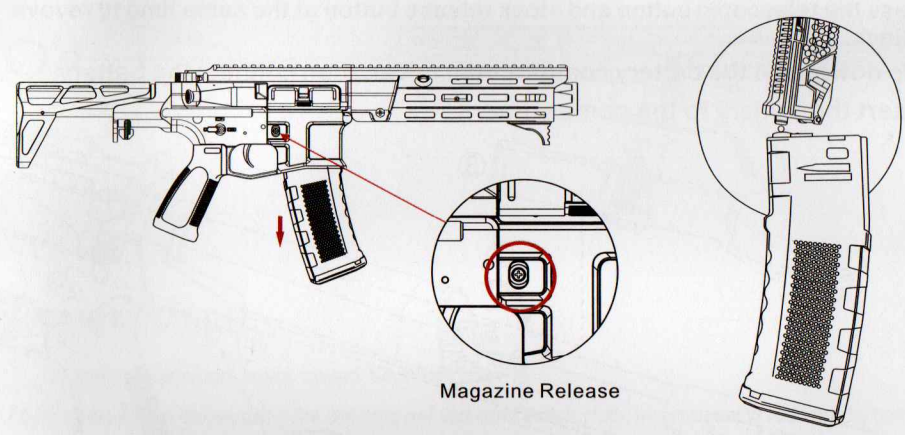

- 1.Press the magazine release button to get the magazine
- 2.Fill the magazine with speed loader.
- 3.Magazine capacity: 180rds


5 TELESCOPIC STOCK

- 1.Pull the stock backward directly to extend, there are three positions to choose from.
- 2.Press the stock telescopic button, simultaneously push stock forward to retract the stock.

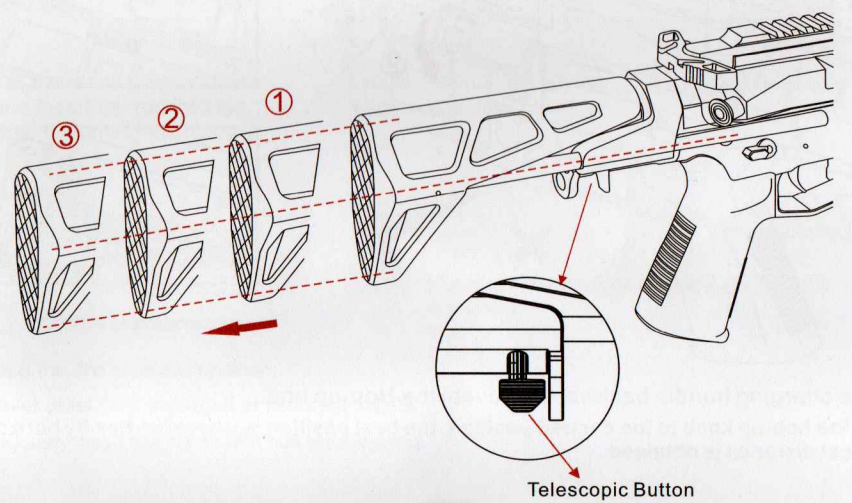


6 BATTERY INSTALLATION


1. Press the telescopic button and stock release button at the same time to remove the stock.
2. Flip downward the battery compartment cover, then connect the battery.
3. Insert the battery to the compartment.

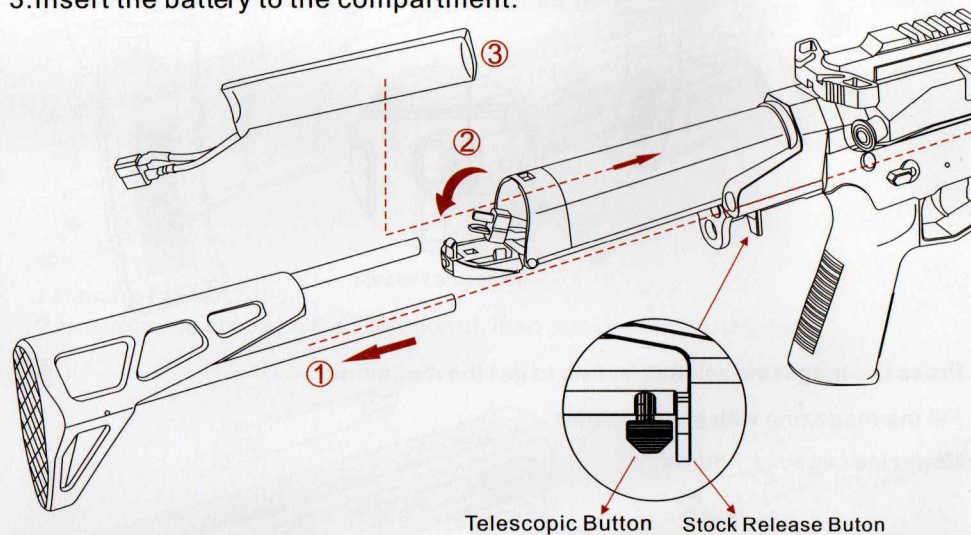

7 HOP-UP ADJUSTMENT

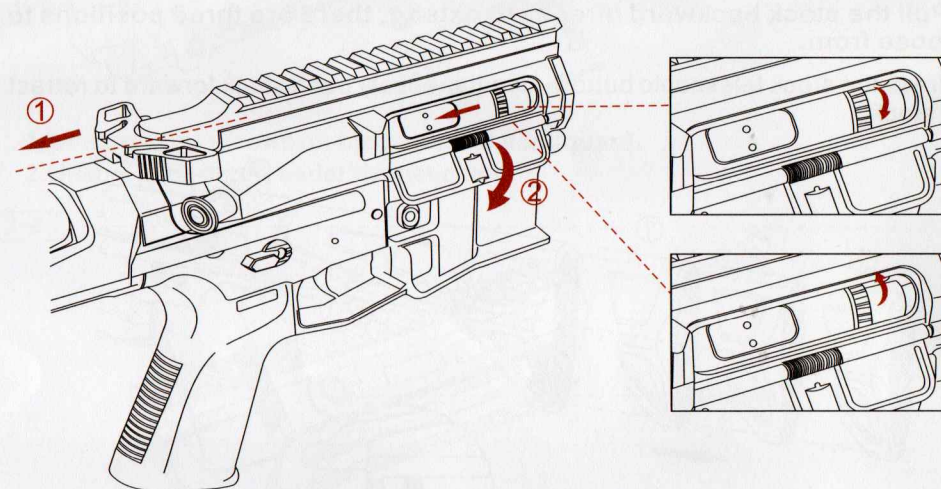



1. Pull the charging handle backward to reveal the Hop-up unit.
2. Adjust the hop-up knob to the desired position, the best position is where the bbs fly horizontally and longest distance is obtained.

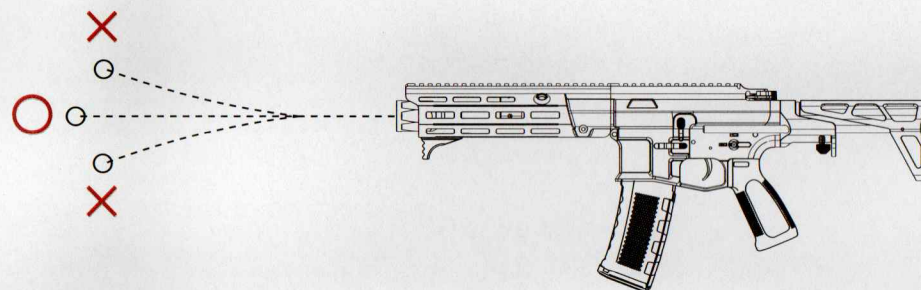

8 MAINTENANCE




8-1 Maintenance when bullet speed becomes low

1. Apply oil as shown below, using the cleaning rod and oiled cotton cloth, insert cleaning rod into the barrel.
2. To complete the cleaning, use the cleaning rod (with cotton) as shown below to remove excess oil.

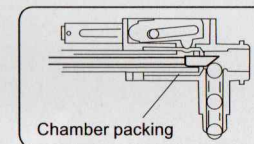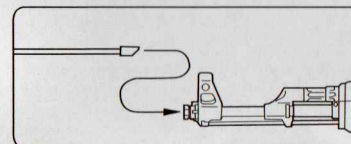

Warning


Always carry out maintenance AFTER returning the hop up knob to the default position. (Hop-OFF)

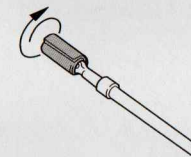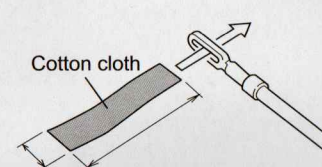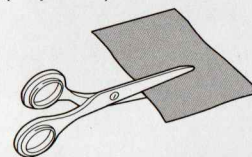

Hold at the leading end of the rod and insert the rod into the barrel while turning the rod.

Length : Approx 25 to 30mm
Width : Approx. 10mm

Wind the cut cotton cloth.

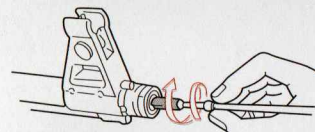

Inserting the rod will be difficult if you hold rod at the end.

8-2 Routine Maintenance

1. Keep the rifle in clean condition.
2. Never use dirty, damaged or distorted bullets.
3. Regularly clean the barrel with soft cleaning rod.

Scan the QR code on the right to download and run ESHOOTER APP.



Connect your Kestrel V2 to your cell phone with the app via blue tooth.

Change you app password if needed.
Note: Default password is 888888.

Follow the pop-up guide in the app and start the first-time calibration.



www.eshooter-world.com



Watch the Video

Scan the QR code above to get more info and watch videos about Kestrel V2