
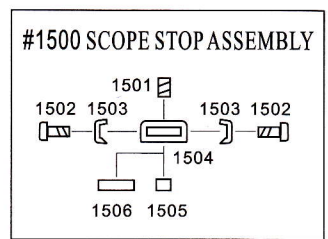
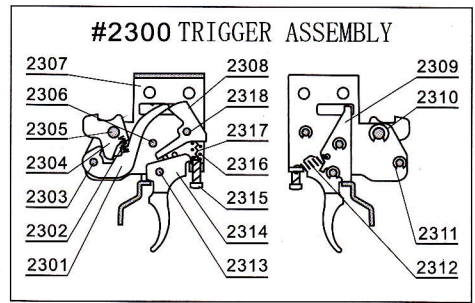


AIR RIFLE PARTS LIST

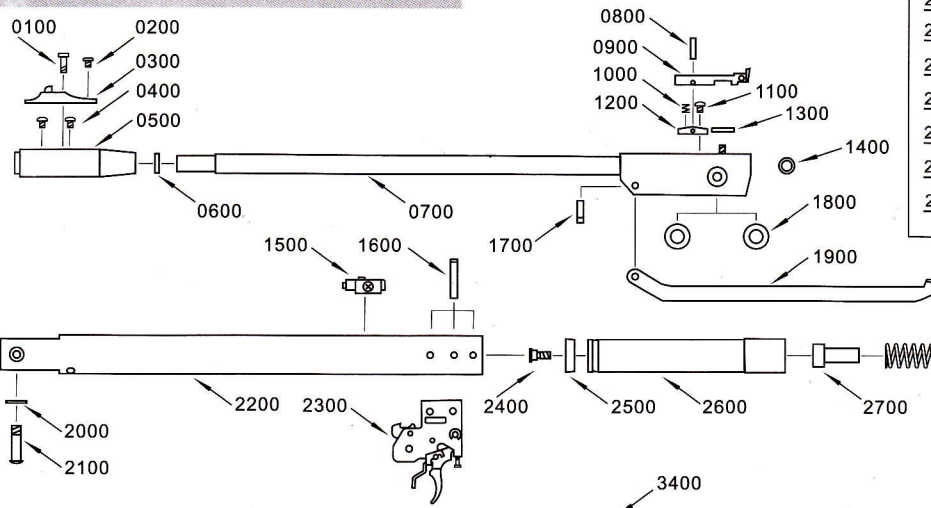

AIR RIFLE PARTS LIST

0100 Front Sight Screw L

0200 Front Sight Screw S

0300 Front Sight

0400 Screw M3 x 5 (2)

0500 Front Sight Base

0600 Washer

0700 Barrel Assembly

0800 Rear Sight Pin

0900 Rear Sight Board Assembly

1000 Rear Sight Spring

1100 Screw M4 x 5

1200 Rear Sight Stand

1300 Elevation Adjusting Disc

1400 O-ring 11 x 1.9

1500 Scope Stop Assembly

1600 Pin (3)

1700 Cocking Lever Pin

1800 Washer (2)

1900 Cocking Lever

2000 Connecting Screw Washer

2100 Connecting Screw

2200 Receiver

2300 Trigger Assembly

2400 Piston Screw

2500 Piston Seal

2600 Piston Tube

2700 Front Piston Pilot

2800 Piston Spring

2900 Washer

3000 Back Piston Pilot

3100 Washer

3200 Receiver Cap

3300 Screw Nut M6

3400 Wooden Stock

3500 Washer (2)

3600 Stock Screw (2)

3700 Screw Cover (2)

3800 Trigger Guard

3900 Trigger Guard Screw

4000 Screw M4 x 40

1501 Screw M5 x 8

1502 Screw M4 x 10 (2)

1503 Clip (2)

1504 Scope Stop Base

1505 Cushion

1506 Nut

2301 Lever #2

2302 Lever Spring

2303 Lever Pin #3

2304 Lever #1

2305 Lever Pin #1

2306 Safety Pin

2307 Trigger Base

2308 Lever #3

2309 Safety Rod

2310 Clip 4(2)

2311 Clip 2.5 (8)

2312 Safety Spring

2313 Trigger Pin

2314 Trigger

2315 Adjusting Screw

2316 Outer Spring

2317 Inner Spring

2318 Lever Pin #3